



**HTP PUMPS**  
**EM-P PUMPS (ATEX VERSION)**

*Metallic Rotary Vane Mag-Drive Pumps*



**INSTALLATION, OPERATION AND  
MAINTENANCE MANUAL**



**(SAFETY INSTRUCTIONS)**  
**Translation of the original instructions**

## Index

<b>1. INTRODUCTION .....</b>	<b>4</b>
1.1 <i>General</i> .....	4
1.2 <i>Purpose of the manual</i> .....	4
1.3 <i>Warning symbols for safety</i> .....	4
1.4 <i>Qualification and training of the personnel</i> .....	4
1.5 <i>Explosive Atmosphere Zones</i> .....	5
<b>2. INSTALLATION .....</b>	<b>5</b>
<i>Preliminary remarks</i> .....	5
2.1 <i>Safety general warnings</i> .....	5
2.1.1 <i>Introduction about danger</i> .....	5
2.1.2 <i>Indications of danger</i> .....	5
2.2 <i>Receipt and Inspection</i> .....	7
2.3 <i>Storage</i> .....	7
2.4 <i>Installation</i> .....	7
2.5 <i>Hydraulic system</i> .....	7
2.6 <i>Pipes connection</i> .....	8
2.7 <i>Monitoring equipment</i> .....	8
2.7.1 <i>Control of pump in explosive atmosphere zones</i> .....	9
2.8 <i>Motor Connection</i> .....	10
<b>3. OPERATION .....</b>	<b>11</b>
3.1 <i>Use and safety</i> .....	11
3.2 <i>Dry-running</i> .....	12
3.3 <i>Temperature</i> .....	12
3.4 <i>Before starting</i> .....	12
3.5 <i>Starting</i> .....	13
3.6 <i>Optimum conditions for use</i> .....	13
3.7 <i>Shut down</i> .....	13
3.8 <i>Long pump inactivity</i> .....	13
3.9 <i>Noise level</i> .....	14
<b>4. MAINTENANCE .....</b>	<b>14</b>
4.1 <i>General dispositions</i> .....	14
4.2 <i>Inspections</i> .....	15
4.3 <i>Procedure before disassembly</i> .....	15
4.4 <i>Disassembly</i> .....	15
4.4.1 <i>Main parts</i> .....	15
4.4.2 <i>Disassembly the pump from the motor and replacement of the o-ring</i> .....	16
4.4.3 <i>Assembling the rotor to the pump body</i> .....	18

---

4.5 Assembly.....	20
4.6 Motor replacement.....	21
4.7 Tightening torque.....	21
<b>5. PROBLEM SOLUTIONS.....</b>	<b>22</b>
<b>6. SPARE PARTS.....</b>	<b>22</b>
6.1 How to order spare parts.....	22
<b>7. DATA.....</b>	<b>23</b>
7.1 Performance curves.....	23
7.2 Dimensions.....	23
7.3 Technical data and limits.....	24
<b>8. WARRANTY AND REPAIR.....</b>	<b>25</b>
8.1 Warranty.....	25
8.2 Returned parts and repair.....	26
8.3 Decontamination Declaration (facsimile).....	27
8.4 CE CERTIFICATE FOR PUMPS SERIES HTP.....	28
8.5 ATEX CE CERTIFICATE FOR PUMPS SERIES EM-P.....	29

## 1. INTRODUCTION

### 1.1 General

This manual refers to rotary vane mag drive pumps of series HTP (EM-P for ATEX applications). Pumps of series HTP are made of different metallic materials (stainless steel AISI 316, AISI 316 L) and can be of different sizes. Dimensions and capacities available are described in paragraph 7.0.

ATTENTION: check on our website [www.gemmecotti.com](http://www.gemmecotti.com) if there are further revisions to this manual.

### 1.2 Purpose of the manual

The main purpose of this manual is to assure that the activities of installation, operation and maintenance of the pumps are executed in a correct and safe way by all the personnel in charge of these operations. This document offers also indications useful for the customer to solve the problems, order spare parts and contact GemmeCotti repair service.

### 1.3 Warning symbols for safety



This symbol indicates a possible danger caused by the presence of electrical fields, contacts or wires with electric current.



All the symbols with the exclamation mark indicate an important situation that needs the attention of the personnel. In particular, these are indications useful for the correct functioning and prevention of possible damage to the equipment.



This symbol indicates the presence of strong magnetic fields which can damage or compromise the functioning of other equipment nearby.



This symbol signals a danger or a situation that requires the maximum attention of the personnel. It's important to respect the instructions stated at the margin of this symbol and proceed very carefully. It's necessary to inform all the personnel and/or users that the rules indicated prevent injuries.

### 1.4 Qualification and training of the personnel



Those in charge of the installation, operation and maintenance of the pumps have to be qualified to carry out the actions indicated in this manual. GemmeCotti is not responsible for the inadequate qualification and training of the customer's staff or for the lack of information of the staff regarding the contents of this manual. It's compulsory to always show this manual to the workers in charge of the installation, operation and maintenance of the pump. Keep this manual in a safe place for future consultations.

## 1.5 Explosive Atmosphere Zones

The pumps described in this manual cannot be used in potentially explosive atmospheres. These uses require special pumps that GemmeCotti manufactures with particular materials and precautions. Customers who want to use special pumps in these kind of zones have to contact the GemmeCotti technical office for the correct choice of the product.



**WE REMIND YOU THAT THE CLASSIFICATION OF THE ZONE (REF. ATEX 2014/34/EU FORMER 94/9/CE DIRECTIVE) FOR POTENTIALLY EXPLOSIVE ATMOSPHERE ZONES HAVE TO BE DONE BY THE CUSTOMER AND COMMUNICATED TO GEMMECOTTI FOR THE RIGHT CHOICE OF THE KIND OF PUMP SUITABLE TO WORK IN THESE ZONES.**

The pumps, manufactured by GemmeCotti, for these kind of applications belong to the series EM-C or EM-T or EM-P.

Pumps model EM-C, EM-T and EM-P in AISI316 can be installed in potentially explosive areas ATEX group II category 2 G Ex h IIC T6...T... Gb and group II category 3 G Ex h IIB T6 Gc. Refer to paragraph 2.7.1. for more details.

The customer is responsible of the correct installation of the pump in accordance with the requirements stated in the Directive.

GemmeCotti will supply together with the pump the Conformity Declaration as per "facsimile" at paragraph 8.5.

## 2. INSTALLATION

### Preliminary remarks

All the references to the pumps have to be considered applicable also to systems that use these pumps unless it's specified otherwise.

### 2.1 Safety general warnings<sup>1</sup>

#### 2.1.1 Introduction about danger



**ATTENTION:** the non-observance of the indications stated in this manual or the inappropriate use of the equipment by unqualified or unauthorized staff, can cause serious personal injuries or death and damages to products and apparatus!

The technical assistance office is at the complete disposal; in case of doubts or problems you can contact us by phone (Number +39 02 964.60.406) or write an email to [info@gemmecotti.com](mailto:info@gemmecotti.com). It's strongly recommended that you keep GemmeCotti written answer.

#### 2.1.2 Indications of danger



For the safety of those in charge of the installation of the pump it's necessary to use safety clothing and individual safety devices approved by the current provisions of the law (e.g. Safety glass, gloves and safety insulating-shoes).

<sup>1</sup> If these warnings are not observed the Certification and the Warranty of the pump can be invalidated



The pump contains particularly powerful magnets. It's forbidden for those who have cardiac pacemakers, defibrillators, electronic medical devices, metallic heart valves, metallic prosthesis or sickle cell anaemia, to handle or be in the proximity of the magnets contained inside the pumps. Consult a health care provider for specific recommendations before working with these pumps.



The powerful magnetic fields in the proximity of the pumps can damage heart pacemakers, watches, credit cards, discs and magnetic tapes inside calculators and computers.



When working in the proximity of pumps, consider that the devices or metallic parts that you are handling can be unexpectedly attracted towards the pump causing possible crushing of fingers or hands.



These pumps have been designed and manufactured to be used in specific conditions and within defined limits. The use outside these specifications has to be agreed and approved by the GemmeCotti technical service. **It must be considered also that, if the pumps are used outside their technical specifications, the CE Certifications and the warranty are no longer valid. Furthermore, if the pump is used outside the technical specifications communicated to us at the moment of the quotation and confirmed in our order confirmation, the customer becomes responsible for the issue of a new CE Certification.**



The pump has to be used only for the applications specified in the order for which GemmeCotti has selected the model, the materials of construction and has tested the pump to respect the specifications. For other uses different from those stated in the order, the customer has to send always a written request to the GemmeCotti technical office, which on its part will reply in a written form.



There will not be any warranty for repairs or alterations on the product done by the users or third parties not specifically authorized by GemmeCotti.



Always shut down the pump before touching or proceeding with any intervention on it or on the circuit of installation.



Make sure that the electrical system to which the pump will be connected has the adequate power and has the correct protection devices (e.g. Grounding, Life safe).



Always switch off the electrical supply before working on the pump for maintenance or part substitution.



Always keep an extinguisher next to the pump installed.

Always pay maximum attention in the execution of maintenance activities on pumps and on the connected circuits when they are used with dangerous liquids.

The use of an electric starter is recommended. A simple switch can be insufficient to start and stop the electric motor connected to the main electric system.

An appropriate starter:

- can prevent accidental starting after a failed attempt to start;
- is a safe switch, protected against water;
- protects the electric motor against overloads due to a short circuit (a fuse protects only the wires);

- resists against starting in overload on the motor, preventing dangerous electric arc and early wear of the electrical contacts.

## 2.2 Receipt and Inspection

Even if GemmeCotti takes all the necessary precautions during the packaging, we suggest that you carefully check the received material. Check for any missing parts caused by the courier and/or by GemmeCotti.

Check the data on the label of the received pump and compare it with those relative to your purchase order.

If the pump has been supplied with the motor, remove the protective shield from the fan of the motor and try to rotate the motor shaft by hand. If you feel a strong resistance to rotation or if you hear anomalous noises call your reliable reseller or call the GemmeCotti assistance service directly.

## 2.3 Storage



If the pump is kept in the warehouse make sure that it's placed in a dry and protected position; always use the original package or an equivalent protection. If the pump has to remain stored for a long period and/or in particularly damp places the use of hygroscopic substance (silica gel) is recommended to prevent damages.



Don't remove the protections of the flanges until the installation and close, if they are not closed already, the discharge and suction pump connections to prevent the intrusion of foreign bodies.



Be informed that a long period of storage of the pumps can provoke:  
-deterioration of the isolation of the motor due to absorption of dampness  
-deterioration of the gaskets

## 2.4 Installation



GemmeCotti s.r.l. is not responsible for injury to people or damage to things caused by the wrong installation of the pump or installation executed by non-qualified personnel.

Install the pump in a position that guarantees a simple use.



The unit motor/pump has to be fixed on a rigid structure that will enable the support of the entire structure. Make sure that the pump is fixed on a plane surface. You can use the baseplates supplied by GemmeCotti in order to assure a perfect pump position or as an alternative use shims under the base-plates of the motor. If necessary use “bumpers” to reduce vibrations towards the fixing surface.

## 2.5 Hydraulic system

The pump is generally part of a hydraulic system that can include a various number of components such as, valves, fittings, filters, expansion joints, instruments, etc. The way the piping is arranged and the position of the components has a great influence on the operation and on the life of the pump.

It is better to rinse the internal pipes of new plants before installing the pump in order to remove possible debris which can enter the pump and damage it.

## 2.6 Pipes connection<sup>2</sup>

Locate the pump as near as possible to the liquid source and below the level of the liquid (under the head).

Always use pipes as short and straight as possible and limit the number of bends assuring a radius of curvature as large as possible. Avoid air siphon or air bubbles that can be created in the long piping line and, if necessary, assure the correct venting of the pipes before starting the pump. Avoid the creation of turbulences or siphons before the suction of the pump, the liquid has to arrive to the pump as smoothly as possible.



The piping should be properly supported and kept in line independently from the pump, until its connections, so that the piping doesn't exert loads on the pump.



The sizes of the suction and discharge pipes have to be at least as large as the inlet connection of the pump. Diameter restriction of the suction pipe is responsible for and a cause of the cavitation of the pump, creating a loss in the performance of the pump and rapid wear. It's advisable always to use (if in case) flexible reinforced pipes that don't collapse under a situation of depression.



Make sure that all the connections are tightened otherwise the suction strength will be reduced

The installation of a proper pressure gauge on both the suction and discharge piping is recommended. The installation of gauges allows an easy control of the correct functioning of the pump in relation to the required working point. In the case of cavitation or other dysfunctions, the gauges will show evident pressure fluctuations.

In the execution of connections and supports to piping it's necessary to pay attention to the thermic expansion.

## 2.7 Monitoring equipment

According to the importance of the pumping system, it could be useful to maintain a strict control of the performances and conditions of the process. The use of instruments to monitor the pressure of the suction and discharge circuit is recommended.



Even the monitoring of the electric power absorbed by the motor is possible using a wattmeter.

If the temperature of the pumped liquid represents a critical element install in the system a thermometer, preferably on suction line.

These control instruments can advise of abnormal operating conditions of pumps such as: accidentally closed valves, missing liquid, overloads etc.

<sup>2</sup> If these warnings are not observed the Certification and the Warranty of the pump can be invalidated

### 2.7.1 Control of pump in explosive atmosphere zones

In addition to respecting the general warnings stated in this manual, special pumps used in potentially explosive areas have to be installed with control equipment specified in this paragraph to maintain a strict monitoring of the performances and process conditions. The control equipment mounted near the pump has to be certified for the same hazardous zone as the pump installed unless it's protected by an airtight closure cabinet also certified

The installation of pumps type EM-(C-T-P) for use in potentially explosive areas has to follow the rules stated in the ATEX Directive 2014/34/UE.

In particular the requirements referred to the manufacturer that are applicable to apparatus of **Category II of Group II** (explosive atmosphere due to gas, vapours or mists presence) are the following:

- the devices have to be designed and manufactured so that they avoid trigger sources, even in case of recurrent anomalies or functioning defects of the apparatus which it's usually necessary to consider.
- The parts of the equipment have to be designed and manufactured so that the maximum surface temperature prescribed is not overcome (paragraph 3.1), even if the risks come from anomalous situations foreseen by the manufacturer.

In particular the requirements referred to the manufacturer applicable to apparatus of **Category 3 of Group II** (explosive atmosphere due to gas, vapours or mists presence) are the following:

- the devices have to be designed and manufactured so that they avoid trigger sources predictable during normal functioning.
- During expected functioning conditions, the surface temperatures must not exceed the maximum temperatures indicated (paragraph 3.1). An eventual overcoming is endurable, in exceptional cases, if the manufacturer adopts extra special protections.

The temperature classes are as follows:

Temperature classes according to ISO80079-36	Liquid temperature limits
T6 (85°C)	60°C
T5 (100°C)	75°C
T4 (135°C)	110°C
T3 (200°C)	175°C

- Ambient temperature should be between -20°C and 40°C as per ISO 80079-36
- Fluid temperature has to be measured at the suction port
- Attention: the chart with the range of temperature is valid only in optimal conditions of use of the pumps (rpm, capacity, head and NPSHa), with correct lubrication and maintenance.
- In any case, the fluid temperature must not exceed the maximum design temperature of the pump (see paragraph 3.1)



For the control of the pumping status all the pumps supplied for Category 2 have to be equipped with a thermoprobe (PT100 ATEX) to check the surface temperature of the pump. The thermoprobe can be installed by the customer in the proper nozzle on the pump bracket. In order to guarantee the complete monitoring of the pump and avoid premature wearing, the

PT100 thermoprobe has to be set 15/20°C over the maximum liquid temperature considering a fluid like water. Pay attention to the temperature setting of the PT100 in case of fluid with big difference in temperature compared with water.



To avoid overloads on the pumps due to impurities or solid particles in the pumped liquid, the use of a filter in the suction line is strongly recommended. This filter has to be regularly checked to avoid obstruction.

To avoid unacceptable or dangerous functioning conditions, it's obligatory to install an adequate measuring instrument for the constant control of the absorbed power of the pump. If unacceptable working conditions are revealed, the pump has to be automatically stopped and checked. The control equipment, if installed near the pump, has to be ATEX certified for the same hazardous zone as that identified for the pump, unless it's protected by airtight closure cabinet also ATEX certified.

NPSHa can decrease in case of installation of a valve in the suction line. In this case, it is necessary to install a flowmeter to check possible variations.



The pump is completely manufactured with conductive materials and so with an accurate ground connection of the pump body there can't be unwanted electrostatic charges, sources of explosion trigger.



The pump installed in ATEX zone 1 or 2 area must be coupled to a suitable ex-proof electric motor.

**ATTENTION:** in case of use of motor and pump with different temperature class, the lower class is applied (for example Pump T4, motor T3= applied temperature T3)

## 2.8 Motor Connection



Check that the tension and frequency printed on the label of the motor correspond to those of the electric system to be used.

Don't connect the electric motor directly to the main system but protect the dedicated system with a suitable main switch with adequate safety protections against overloads.



The electric connections have to be always carried out by an expert qualified electrician. The motors have to be supplied with three-phase tensions or if required by the customer, with mono phase tension. The type of connection of the three-phase motors can be Star (Y) or Delta ( $\Delta$ ) according with the power supply 380 or 220 VAC (see picture 1).



Picture 1

Make sure that the sense of rotation of the motor is that specified on the pump head and eventually indicated by a sticker arrow on the motor fan cover; to change the sense of



rotation it's sufficient to change two of the three entering line (E.g . L1 with L2) in three-phase motors.

Read the following instructions to change the sense of rotation:

- wear individual homologated protection devices (e.g. Gloves, glasses)
- make sure that the operating conditions are analogous to the specifications of the pump (see paragraph 7)
- install the pump in the hydraulic system
- open the suction and the discharge valve completely;
- fill the pump with the liquid. It' s recommended to perform this test with an inert liquid like water
- do not run the pump dry (Note: the design of mag drive pumps don't allow dry running because it causes damages to the inner components of the pump)
- start the motor only for one or two seconds to check that the sense of rotation is in the same direction of the arrow on the pump head.



### 3. OPERATION

#### 3.1 Use and safety

##### **ATTENTION:**

Dangerous or hazardous actions can cause serious injuries or death to people or serious damage to materials and so it's important to assure the respect of all the warnings relative to the safety and the correct use written in this manual.



Verify always that the pumped liquid is compatible with the materials of construction of the pump. For any clarification please contact GemmeCotti technical office.



In case of use for pumping aggressive, toxic liquids or liquids dangerous for the health of the personnel, it's necessary to install on the pump an adequate protection for the containment, the collection and the warning of any dangerous product in case of leakage: e.g. DANGER OF POLLUTION, CONTAMINATION, INJURIES AND/OR DEATH



Do not pump liquids containing solids in suspension. Mag drive pumps are designed to pump clean liquids. The use of a suction strainer is strongly recommended (however the filter has to be kept clean). We suggest a continuous check of the suction strainer to avoid obstruction of the suction causing cavitation. Avoid in particular to pumping liquids containing ferro oxides or other ferromagnetic particles, even if small. If you are in doubt, please call GemmeCotti technical service (tel. +390296460406)



Do not reduce the suction. Reduction of the suction is responsible of the cavitation of the pump, which causes a loss of efficiency and a rapid wear. Reduction of the discharge are not advisable, if required, reduction of the capacity can be obtained by means of a valve installed on the discharge pipe.



Do not loosen the connection of the pump while it's under pressure.

Do not start and/or use the pump if there are signs of leak in the system.



The working temperatures have to respect the characteristics of the construction materials of the pump:

- 120 °C Stainless steel AISI 316 execution<sup>3</sup>



**DO NOT ALLOW THE PUMP TO RUN DRY** (note: the mag drive pump design doesn't allow the dry-running functioning because it will damage irrevocably the inner parts of the pump)



An accidental failure can generate sprinklings up to considerable distances.



In case of vibrations or anomalous noises, stop the pump immediately .



Do not pump inflamed liquids.

Do not touch the pump while operating.

Before touching the motor or the bracket switch off the electric current.

### 3.2 Dry-running



Fill the pump with water (if compatible with the process liquid) or with the liquid to be pumped before starting the unit. This will protect the bearings and the shaft of the pump against dry running. **DO NOT ALLOW THE PUMP TO RUN DRY** because this can cause serious damages to the internal parts of the pump due to the lack of the necessary lubrication.

### 3.3 Temperature



Increasing the temperature of the pumped liquid can damage the pump and/or the piping and there can be a situation of serious danger for the people in the nearby. Avoid sudden changes of the temperature and do not exceed the temperature specified in your order and confirmed in our order confirmation. See the value of temperatures of the construction materials of the pumps in the paragraph 3.1.

### 3.4 Before starting



Make sure that the pump is installed in accordance with the instructions supplied in the previous section 2.



When the pumping station is new, it's necessary to fill the system with water (or other inert liquid) to control that there are no leaks. **WHEN THE PUMP IS INSTALLED OVER HEAD IT HAS TO BE PRIMED, THIS MEANS THAT IT HAS TO BE FILLED WITH THE LIQUID AND THE SUCTION PIPING HAS TO BE KEPT FULL OF LIQUID BEFORE STARTING THE PUMP.**



**ATTENTION:** some liquids react with water. **VERIFY IF THE LIQUID TO BE PUMPED REACTS WITH WATER. IN THIS CASE THE SYSTEM HAS TO BE COMPLETELY EMPTIED AND DRIED.**

<sup>3</sup> Upon request it is possible to supply HTP pumps with special configurations which can work with a temperature range -70°C / + 200°C

### 3.5 Starting

Start the electric motor and open all the valves on delivery pipe to avoid overpressure.

The pump can't operate with the discharge closed. This can cause serious damage to the pump.

If the pressure shown on the pressure gauge on the discharge piping does not increase, stop the pump immediately and release the pressure carefully.

Repeat the operation of installation of the pump as in paragraph 2.

If during the starting procedure there are changes of flow-rate, of density temperature or viscosity of the liquid, stop the pump and contact GemmeCotti technical service.

### 3.6 Optimum conditions for use

Operating continuously at the maximum performances (maximum capacity/head) there can be an early wear of the pump. As a general rule, we recommend using the pump at half of its maximum capacity (see the paragraph relative to the technical data)



The capacity and the head of the pump refer to water pumping at room temperature. If it pumps high temperature liquids or other viscosities and densities, the performances have to be proportionately decreased. Pumps of series HTP work well with liquids having a viscosity up to 100 CPS<sup>4</sup> and specific gravity up to 1.9 kg/dm<sup>3</sup>. **HOWEVER BOTH THE VISCOSITY AND THE SPECIFIC GRAVITY HAVE TO BE COMMUNICATED AT THE MOMENT OF QUOTATION.** The electric motor is selected for the viscosity and the specific gravity communicated. In the case of higher values, the power of the motor could be insufficient.

### 3.7 Shut down

Normally the pump should be shut down only after closing the discharge valve. If the suction valve is closed before the other, cavitation of the pump can occur.



If the suction is flooded, close the valve after shutting down the pump.

In some cases the pump can be used to empty tanks, in these situations the liquid can stop flowing in the pump while this is still working. In these cases a pump operating without liquids (that means dry-running) can be dangerously damaged if it's not stopped immediately. For such applications the use of automatic equipment or the constant presence of a person who can shut down the pump is recommended.

### 3.8 Long pump inactivity

If the pump has to remain inactive for a long period, before stopping it, it's recommended to let water flow in the system for several minutes so that you avoid any risk of internal deposits or sediments or precipitations of solid parts. Drain the liquid in the pump. An eventual freezing of the liquid inside the pump can cause damage. Always verify if the pumped liquid reacts with water. In this case contact GemmeCotti to find an alternative

<sup>4</sup> The values indicated are merely indicative and can vary in the series of pumps mod. HTM

solution.



If the pump is temporary removed from the system and kept in stock, it's necessary to follow the instructions of paragraph 2.3 "Storage".

### 3.9 Noise level

In some circumstances, for example when the pump works with high pressure and low capacity the noise increases and can be disturbing for the personnel working in the proximity. In this case it's possible to intervene with:



- earplugs;
- protective homologated caps against noises for the personnel in the proximity;
- soundproofing canopy for the pump. In these cases make sure that the motor ventilation is guaranteed.

## 4. MAINTENANCE

### 4.1 General dispositions



During the warranty period extraordinary maintenance is allowed only for GemmeCotti personnel or personnel authorized by GemmeCotti. All the operations described in the paragraphs below have to be done exclusively by qualified staff and following step by step all the warnings written in this manual.

In case of ordinary maintenance (as indicated in paragraph 4.2) the customer is responsible for the correct assembly and disassembly of the pump. The warranty is no more valid if the pump is manipulated/sabotaged, the parts used for the maintenance are not GemmeCotti original or in case of operations not in compliance with the instructions indicated in this manual.

During ordinary maintenance the customer should check the absence of leakage (through hydrostatic tests, paying attention to respect the NP of the pump.), the magnet/rotor alignment, the correct rotor shaft positioning, the correct bearing placement and the right functioning of the pump. For the tightening torque of the screws please refer to paragraph 4.7. Pay attention also to avoid ruining the o-ring when mounting it.



Clean the external surface of the pumps using only antistatic equipment. Every operation executed on the apparatus has to be done after the disconnection of electric supply.



Use exclusively a good lift or some other suitable machine to move pumps with weight higher than 16 kg. During the movements of the machine or parts of the machine avoid collisions or falls which can damage the apparatus.



Before disassembling the parts of the pump, make sure that the dangerous internal liquids have been removed /washed. **THE PUMP HAS TO BE DRAINED AND DECONTAMINATED.**



Pay attention that some internal liquids can have dangerous reactions in contact with water.



During the operations of unloading of dangerous liquids make sure that situations of danger for people or environment don't occur.

## 4.2 Inspections

In general mag drive pumps do not need a “routine” maintenance and most of all they don't require frequent dismantling.

However periodical inspections are advisable to verify the state of wear of the rotor, the o-rings and the graphite parts and if the general conditions of the internal parts of the pump are good.

The time between the inspections is strongly dependent on the operation conditions of the pump: the characteristics of the liquid, the temperature, the materials used and obviously the period of operation.

After the first start-up of the pump we strongly recommend an inspection of the graphites after 3 months of functioning. If the inspection has positive results, we recommend a second check after further 6 months. The following inspection can be scheduled after another year of functioning (about 2000 working hours of the pump). In any case it is advisable to replace the graphite parts every 2000 hours of functioning of the pump. All the other components can be replaced only when they show signs of wear.

If a problem occurred or the pump needs a complete inspection see section “Problem solutions” and “Pump disassembly”.

## 4.3 Procedure before disassembly



### ATTENTION:

If the pump has pumped hot liquids, make sure that it's been cooled before the disassembly procedure. It's possible that the pump has pumped toxic and/or dangerous liquids: so it's necessary to wear protection for the skin and the eyes.



### ATTENTION:

Make sure that the pump has been carefully cleaned. Wash and neutralize completely the dangerous liquids inside the pump. The liquid has to be collected and eliminated according to the existing environmental laws. After disconnecting the discharge and suction pipes close the extremities.



### ATTENTION:

GemmeCotti pumps contain extremely strong magnets. The use of non ferro-magnetic tools and working surfaces is highly recommended.

Pay attention to the strong magnetic attraction when disassembling/assembling the unit motor-external magnet of the pump.



The area in which maintenance is done has to be clean and without ferric particles that can be attracted by the magnets.


## 4.4 Disassembly

NOTE: the photos used to show the operations of disassembly refer to a particular pump model of the series HTP (model 400) and consequently the pump supplied to you can be slightly different from what is shown.

### 4.4.1 Main parts

The drawing below shows a section with all the main parts of a pump series HTP 1°-2° RANGE in stainless steel (model 400).

## SECTION AND PARTS LIST/SEZIONE E LISTA PARTI

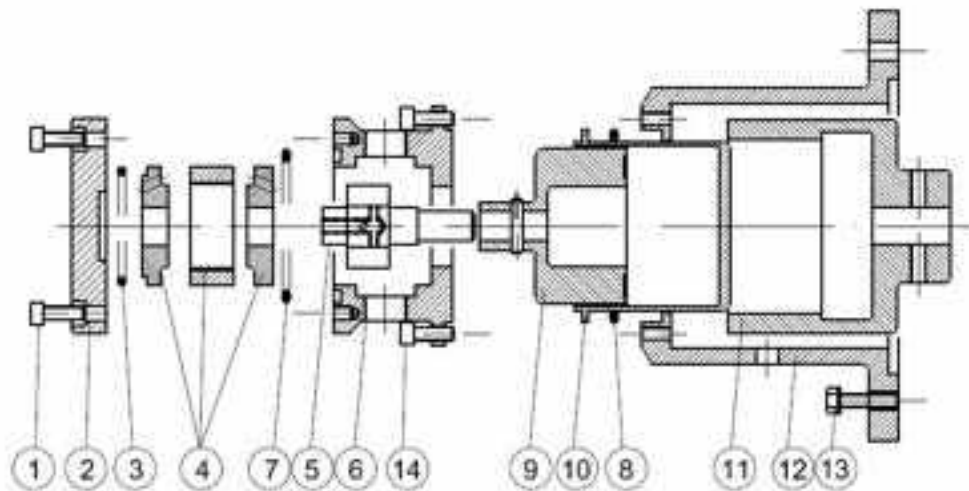

POS.	1	2	3	4	5	6	7	8	9	10	11	12	13	14
PART	SET	END	O-RING	FLANGES	ROTOR	PUMP	O-RING	O-RING	INTERNAL	REAR	EXTERNAL	BRACKET	SET	SET
DESCR.	SCREWS	COUPLER		STATOR	SHAFT	BODY			MAGNET	CASING	MAGNET		SCREWS	SCREWS
MAT.	AISI304	AISI316	EPDM VITON	GRAPHITE	AISI316	AISI316	EPDM VITON	EPDM VITON	AISI316	AISI316	CAI+Invar	ALUMINIUM	AISI304	AISI304


Photo N. 1 shows the main parts of a pump series HTP in stainless steel (excluding the motor)

Photo N. 1



#### 4.4.2 Disassembly the pump from the motor and replacement of the o-ring

 Sequence of operations:



1. After removing the 4 bolts securing the pump and the motor flange, separate the parts paying attention to the magnetic attraction of the two elements (the group of the internal magnet in the pump and the group of external magnet on the motor shaft) that can cause injury to fingers or hands (Photo n. 2).
2. If it's necessary to remove the external magnet (Photo N. 3) from the motor shaft proceed by unscrewing the 2 grub screws with a male hexagonal key and then use a puller to avoid damage to the motor shaft or the external magnet.



Photo N. 2



Photo N. 3

3. To disassemble the pump head from the bracket unscrew the 4 screws with a male hexagonal Key as shown in photos 4 and 5



Photo N. 4



Photo N. 5



Every time that used pumps are disassembled<sup>5</sup> it's necessary to replace all the o-rings (position 3 and 7 in the section drawing) and proceed according to the warnings listed in this paragraph:

4. To separate the group of the internal magnet from the pump head, support the groups as shown in photo 6 and remove the pin using a punch for pins and a hammer paying attention not to damage the parts.
5. To separate the internal magnetic group from the pump head always use an extractor (Photo 7).

<sup>5</sup> After a decontamination of the pump from the pumped liquid



Photo N. 6



Photo N. 7

6. Then open the pump removing the 8 screws, take away the end cover, place the part under a hand press supporting it with a collar of a suitable diameter to extract stator flange (position 7) and the rotor (Photos 8 to 11).
7. Clean and check all the parts replacing damaged or particularly worn components; always replace the o-rings of the pump.



Photo 8



Photo 9



Photo 10



Photo 11

#### 4.4.3 Assembling the rotor to the pump body

- 1- As the parts are very precise and the tolerance between them is strict, it's necessary to warm the pump body using an industrial heat blower (photo 13) for 3-4 minutes before assembling the parts.



**ATTENTION:** The temperature of the pump body will be very high (more than 50°C) so please use protection gloves to manage the part or any other tool like for example that you can see in photo n. 12 and 13.



Photo N.12



Photo N. 13

- 2- Insert a metallic stick into the bore at the bottom of the pump body. This will help the correct placement of the parts. Add one after the other all the parts in pos. 4 of our drawing. First the rear disc in graphite, paying attention to keep the bores on the left side and the flat surface at the bottom of the pump body (photo 14- 15-16-17). Then add the stator in graphite. Replace the metallic stick with the pin supplied by GemmeCotti (Photo 18-19-20).



Photo N.14



Photo N. 15



Photo N.16



Photo N. 17



Photo N. 18



Photo N. 19



Photo N 20

- 3- Then it's necessary to prepare the rotor shaft. Insert the 2 pins<sup>6</sup> in the holes which are perpendicular (90°) to the shaft (photo 21 and 22). Then the rotor has to be placed in the pump body previously prepared. (Photo N. 23).



Photo N. 21



Photo N. 22



Photo N. 23

- 4- Add the 4 graphite vanes in the rotor shaft (Photo 24) and in the end insert the last front part of graphite stator with the o-ring seat placed on top (Photo N. 25 e 26). Put the o-rings and closed the cover.



Photo N. 24



Photo N. 25



Photo N. 26

**Attention:** it is useful to make a sign with a pen on the cover to indicate the upper part of the pump in order to avoid coupling the pump body upside down to the motor.

#### 4.5 Assembly

The sequence (in reverse) of operations of assembly is the same as that of disassembly. However it's necessary to consider the following warnings:



**ATTENTION:**

Clean accurately every component before assembly, make sure that the parts are not dirty, and don't have metallic particles etc

Place the external magnet on the motor shaft until it touches the shaft shoulder. Then

<sup>6</sup> In HTP 3R, size 1500-2000 there are no pins

screw the grub screw to fix it.



Photo 10



- always verify the correct placement of the bearings and then use a hand press for their complete introduction in seat;

- make sure that when closing the pump, the o-ring is perfectly in seat and is not pinched;



- during the introduction of the pump on the motor pay attention to the magnetic attraction that can cause injury to fingers or hands;

- use dynamometric wrench for the correct strength to tighten the bolts in accordance with the chart of the following section 4.7.



- after assembling the pump on the motor flange, remove temporarily the protective shield on the fan at the back of the motor and rotate it by hand to check the free rotation of the unite. In case of excessive friction or anomalous noises, disassemble the group (instructions paragraph 4.4) and find out the cause of the problem. Never use the pump without proceeding with this test.

#### 4.6 Motor replacement

Proceed as indicated in the previous paragraph 4.4.2. Make sure that the characteristics of the motor are equal to those of the replaced motor. The manufacturer of the new motor can be different from that of the motor already mounted.

#### 4.7 Tightening torque

The recommended tightening torque are written in the following chart:

	1° RANGE		2° RANGE		3° RANGE	
	screw	Nm	screw	Nm	screw	Nm
Motor/pump body	<b>M8</b>	<b>20/25</b>	<b>M8</b>	<b>20/25</b>	<b>M10</b>	<b>35/40</b>
Pump head/bracket – cover/pump head	<b>M5</b>	<b>5</b>	<b>M5</b>	<b>5</b>	<b>M8</b>	<b>20/25<sup>7</sup></b>

<sup>7</sup> Tightening torque of HTP IIIR 1500/2000 with oring in Fep: 7 Nm

## 5. PROBLEM SOLUTIONS

									Possible cause	Solution
1	2	3	4	5	6	7	8	9		
Motor overload	Insufficient speed of the flow or pressure in the pump	Insufficient pressure from the discharge pipe	Irregular delivery pressure flow	Noises and vibrations	Blocked pump	Pump overheating	Anomalous wear	Leak/in the pump		
	•								Wrong direction of rotation of the motor	Invert the direction of rotation
	•	•	•	•					Insufficient suction head (NPSH)	Increase NPSH available: <ul style="list-style-type: none"> <li>● Raise the suction head (positive head)</li> <li>● Lower the pump</li> <li>● Increase the diameter of the suction pipe</li> <li>● Make suction pipe short and straight</li> </ul>
		•							Pump clogged	Clean the pump
	•		•	•			•		Cavitation	Increase the NPSH available
	•		•	•			•		The pump sucks air	Check that the joints on suction pipes are tight
		•	•	•					The suction pipe is blocked	Check the valves and filters on the suction line
	•			•					Discharge pressure too low	Reduce the pressure increasing the diameter of pipes and/or reduce the number of valves or bends
•				•		•			Flow rate too high	Reduce the flow: <ul style="list-style-type: none"> <li>● reduce the rotation speed</li> </ul>
	•			•	•	•	•		Liquid temperature too high	<ul style="list-style-type: none"> <li>● Cool the liquid</li> <li>● check the relief valve</li> </ul>
								•	Wrong material of the o-ring for the liquid	Mount o-rings of different material (contact us)
				•	•	•	•		Foreign objects in the liquid	Use a filter on the suction side
		•							Valve closed on suction side	Check and open the valve
	•								Discharge pressure too high	Decrease the suction pressure: open the delivery valve or change the delivery pipe with one of a bigger size.


## 6. SPARE PARTS

### 6.1 How to order spare parts

A complete kit of spare parts for these kinds of pumps is available. Please contact GemmeCotti or our distributors. To have the spare parts it's necessary to communicate the model of the pump, the size, the material, the serial number, the year of construction and the number relative to the spare part required. All the references are written directly on the pump label and on the section drawings of the pump. If you don't have the necessary drawings please contact the GemmeCotti sales office (tel. +39 0296460406).


## 7. DATA

### 7.1 Performance curves

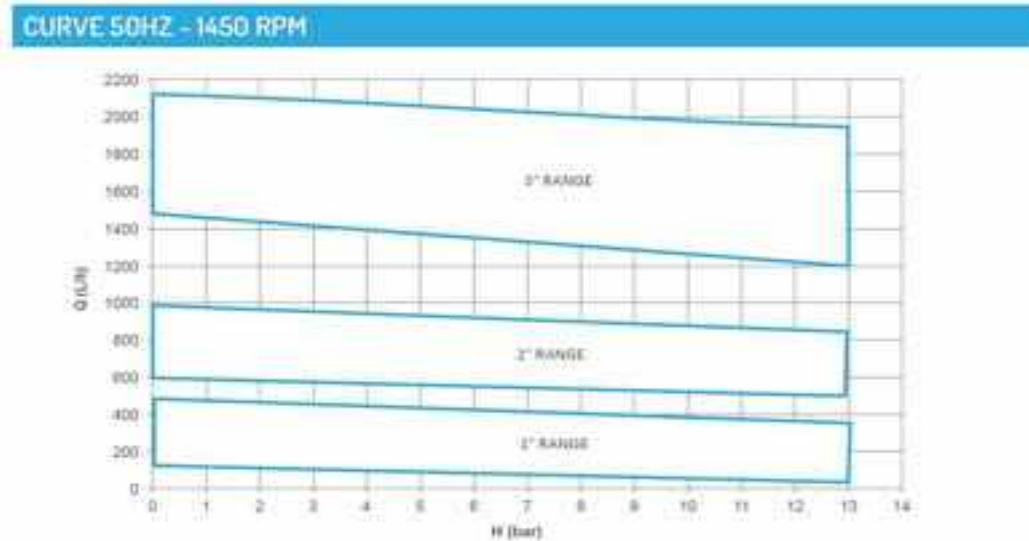

### 7.2 Dimensions

**HTP 1<sup>o</sup>-2<sup>o</sup> RANGE / EM-P 1<sup>o</sup>- 2<sup>o</sup> RANGE (ATEX VERSION)  
DIMENSIONS**

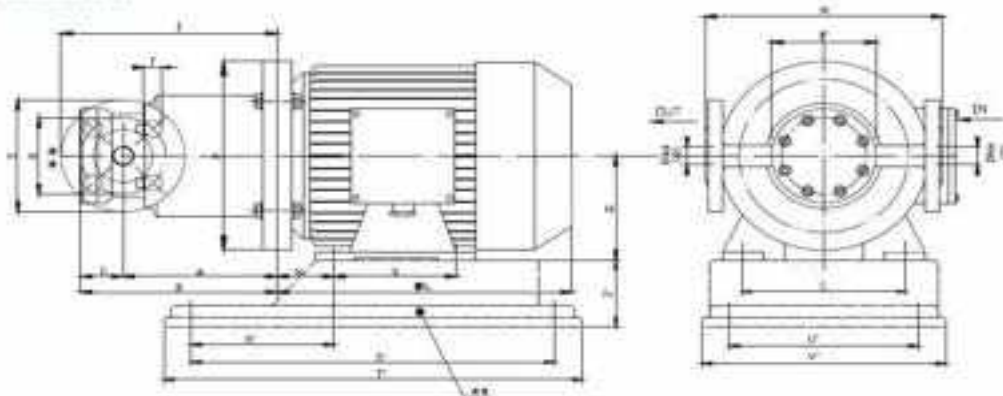


PUMP TYPE	FLANGED DIMENSIONS - mm -					
	W	S	T	W <sub>fl</sub>	W <sub>fl</sub>	W <sub>fl</sub>
HTP 1 <sup>o</sup> RANGE	200	100	14	15	15	200/140/120
HTP 2 <sup>o</sup> RANGE	250	100	14	20	20	250/140/120

PUMP TYPE	MOTOR FLANGE Ø2 - Ø3	H <sub>fl</sub>	DIMENSIONS - mm -													BASE PLATE DIMENSIONS - mm -							
			A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S		
HTP 1 <sup>o</sup> RANGE	75	6,00	107	100	62	307	75	80	33	175	220	185	40	3/8" S	100	3/8" S	102	244	230	230	100	40	
	80	6,75	100	100	120	300	80	80	33	160	220	194	50	1/2" S	100	1/2" S	102	262	250	250	107	230	80
HTP 2 <sup>o</sup> RANGE	80 S	6,5	110	110	140	300	90	80	33	160	220	194	50	1/2" S	100	1/2" S	102	262	250	250	107	230	80

\* Different according to the motor supplier. \*\* OPTIONAL UPON REQUEST: Baseplate - Flanges.  
NOTE: DIRECTION OF ROTATION IS COUNTER CLOCKWISE AS SEEN WHEN FACING THE MOTOR.  
PUMPS AVAILABLE THREADED OR FLANGED.

## HTP 3° RANGE / EM-P 3° RANGE (ATEX VERSION) DIMENSIONS

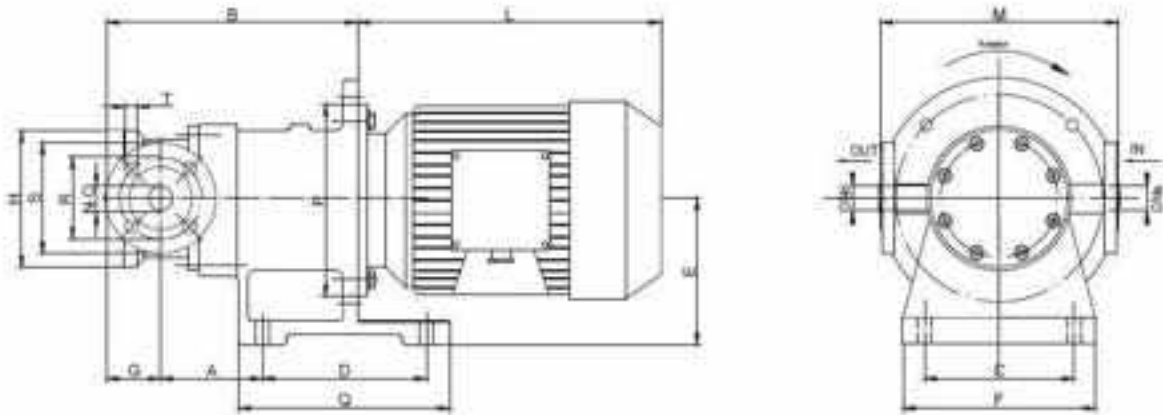

PUMP TYPE	FLANGE DIMENSIONS - mm					MATERIAL
	R	S	T	DN	DM	
HTP 3° RANGE	85	85	14	25	25	304L-SS

PUMP TYPE	MOTOR IS 4P		DIMENSIONS - mm													
	SIZE	KW	A	B	C	D	E	F	G	H	N	N	N	U	V	
HTP 3° RANGE	55L	15	106	280	65	175	65	230	55	142	280	240	340 E	340 E	280	110
	100L	22/3	106	280	65	175	65	230	55	142	280	240	340 E	340 E	280	110
	125L	4	106	280	65	175	65	230	55	142	280	240	340 E	340 E	280	110

### 7.3 Technical data and limits

The performance curves are valid for homogeneous liquids with specific gravity =1. If the liquid to be pumped has a specific gravity higher than 1, the absorbed power written on the performance curve has to be increased according to the value of the specific gravity of the liquid. For liquids having specific gravity higher than 2, please contact the GemmeCotti technical service (tel. +390296460406; e-mail [info@gemmecotti.com](mailto:info@gemmecotti.com)).

The performance curves are valid for homogeneous liquids having viscosity of 1CPS. If the pumped liquid has a viscosity different from 1 CPS the values of Q/H will be altered. The performance of the pump will decrease. For liquids having viscosity lower than 0.5 CPS or greater than 150 CPS please contact the GemmeCotti technical service.

Values of required NPSH written on the performance curves are the lower required values. As a rule, for safety reasons, the value of NPSH of the system (NPSH available) should be at least 0,5 m higher than the value of required NPSH (written on the performance curves).

Values of performances written on the curves refer to trial pumps during prototype phase. In pumps manufactured in series such values can be lower. Usually these values have to be considered as follows:

- pumps with discharge up to 25mm: - 3 points
- pumps with discharge superior to 25mm: - 2 points

Characteristics of pumps series HTP are guaranteed by the manufacturer with tolerances in accordance with UNI EN ISO 9906:2002 regulation. With respect to other specifications or regulations requiring more restricted tolerances, these have to be specifically asked for at the moment of quotation; in this case GemmeCotti will choose a pump more suitable and the required regulations will be considered.

## 8. WARRANTY AND REPAIR

### 8.1 Warranty

All GemmeCotti products are guaranteed for a period of twelve (12) months starting from the delivery date of the goods.

For the warranty service to be applicable the customer must report the defect in writing no later than 8 (eight) days from the moment that the damage occurs, and must return the part (or parts) to GemmeCotti for repair or replacement. Pumps cannot be repaired or substituted on site. In the case of a request of warranty service, it's better to send the complete pump together with its motor to GemmeCotti.

The costs of delivery and the relative risks, and possible customs duties have to be paid by the customer. GemmeCotti will not accept the costs of collection and shipment.

The manufacturer is not responsible for damages caused during the shipment of the parts or of the pump sent to GemmeCotti to be repaired under warranty.

The warranty system provides that, after a careful examination at our factory, GemmeCotti is free to choose to repair or replace the part (or parts) of the pump which is/are defective in materials or in workmanship, or both. We will not give any refund or credit for the defective material or for direct or indirect damages caused by our pumps. In any case, any reimbursement cannot exceed the cost of the pump or of the supplied material.

If the pumped liquid and the needed performances have not been communicated to GemmeCotti before the offer and confirmed in the quotation and order confirmation and/or the pump is not properly installed, maintained and used for its intended purpose or under conditions which can reasonably be foreseen as indicated in the Machine Directive 2006/42/CE article 4 paragraph 1, the customer takes the whole responsibility for the usage of the product, especially if not used in an appropriate way, and the warranty, the conformity to the Machine Directive 2006/42/CE and the relative CE declaration are no longer valid. The proper installation, maintenance and use for its intended purpose and the conditions which can reasonably be foreseen are subject to the respect of the technical limits (temperature, working point, compatibility of the pump material with the pumped fluid, NPSH etc...) which are indicated in GemmeCotti's technical data files and use and maintenance manuals.

If the above mentioned limits are not respected, the customer is the only responsible for the introduction of the pump in the market, for the declaration of conformity to the Machine Directive and the CE mark. In any case the user is considered the one who knows better the chemical compatibility and the reactions between the liquid to be pumped and the material of

construction of the pump and consequently the information given in this regard by GemmeCotti is merely indicative.

If the returned piece is no longer covered by guarantee, or if after inspection GemmeCotti finds the piece to be not defective, inspection charges will be charged to the customer and the repaired or substituted piece will be returned to the customer at the customer's own expense.

Pumps which have been repaired or substituted under guarantee will be supplied on the same delivery conditions as the order and the warranty will not be extended.

Warranty does not cover components subject to natural wear due to time, such as mechanical seals, bearings, bushings and lip seals.

The customer is solely responsible for the good performance of pumps and for their careful maintenance. Therefore no claims will be allowed when goods have been improperly handled (not stored in a suitable closed dry place, which is necessary because of the fragility of materials), contaminated, handled with negligence, improperly installed, tampered with or not well regulated, incorrectly used in wrong applications. In particular, GemmeCotti will not take any responsibility in the case of wear due to corrosion.

Ordinary repairs and/or maintenance must be carried out in accordance with the instructions indicated in the manual and carried out by pumps experts. Any case of pump tampering or modification, the warranty and the CE declaration will lose their validity. In this case, the customer will assume the product risk and he must issue a new CE declaration of conformity.

The warranty does not cover damages due to extraordinary or natural events, such as lightning, ice, fire and others.

All the warranty obligations are considered fully satisfied after the repair or substitution of the defective parts.

The Warranty service will be suspended in the case of default or delayed payment and the period lost cannot be recovered.

This warranty is an integral part of the offer and of the order confirmation.

In the case of litigation the court which has jurisdiction is the Busto Arsizio (Italy) Tribunal and the law that will be applied is the Italian Law.

## **8.2 Returned parts and repair**

All our distributors offer a complete repair service. Contact your local distributor or GemmeCotti s.r.l. directly.

Before sending the pump back to our repair services or to GemmeCotti, the pumps have to be decontaminated from the used dangerous liquids. Before sending the pump the customer has to fill in the Decontamination Declaration and send it by e-mail or fax as per the facsimile document in the next paragraph 8.3.

**8.3 Decontamination Declaration** <sup>8</sup> (facsimile)

To: GemmeCotti S.r.l su  
Via A. Volta, 85/A Ceriano Laghetto (MB)

**SUBJECT: Decontamination Declaration of pumps to be repaired**

Reference to our Transport document No: \_\_\_\_\_ dated: \_\_\_\_\_

Type of pump: \_\_\_\_\_ Serial Number: \_\_\_\_\_

Fluid pumped: \_\_\_\_\_

Type of problem/damage: \_\_\_\_\_

In accordance with current requirements regarding the health and safety of workmen, we hereby declare that:

1. The pump has been carefully cleaned and decontaminated to remove all traces of the pumped fluid
2. Also the residual fluid used to decontaminate the pump has been removed
3. It is possible to proceed with the repair of the pump without risks for the workmen or the environment

*Attention: if the pump is not correctly cleaned or we do not receive this document duly filled in, it will be sent back at the customer's expense*

Date \_\_\_\_\_

STAMP AND SIGNATURE

---

<sup>8</sup> TO FILL IN ON YOUR HEADED PAPER

## 8.4 CE CERTIFICATE FOR PUMPS SERIES HTP

### Declaration of conformity<sup>9</sup>(facsimile) to the Machine Directive 2006/42/CE

#### CE DECLARATION OF CONFORMITY

We state under our own responsibility that the pump:

Supplier : GEMMECOTTI

Type :

Model :

Serial Number:

Year:

as per described in attached documentation, is in accordance with the Machine Directive CE 2006/42 (ex 89/392/CEE - 91/368/CEE - 93/44/CEE – 93/68/CEE- 98/37 CEE) only if it's used for the liquids communicated by the customer..... and for the pump characteristics required with regard to the order No.....dated.....

If the pumped liquid and the needed performances have not been communicated to GemmeCotti and/or the pump is not properly installed, maintained and used for its intended purpose or under conditions which can reasonably be foreseen, the customer takes the whole responsibility of the products as indicated in our warranty Mod. 1.11.4E.

The conformity to the previously mentioned requirements is expressed by the marking:



ENRICO GEMME  
(Managing Director)

Ceriano Laghetto, .....

Signature

<sup>9</sup> If the customer doesn't communicate the liquid pumped or the functioning conditions, the CE Declaration can't be sent and the customer will be the responsible of the certification of the pump for its application.

## 8.5 ATEX CE CERTIFICATE FOR PUMPS SERIES EM-P

### EC Declaration of conformity <sup>10</sup> (facsimile) To machine Directive 2006/42/CE and to ATEX 94/9/CE directive



**EU Declaration of conformity**  
The magnetic drive pump type:

SH

Together with all the pumps series:  
**EM(-P) SS316**

models:  
EM-P 100 SS316, EM-P 200 SS316, EM-P 300 SS316, EM-P 400 SS316, EM-P 600 SS316, EM-P 800 SS316, EM-P 1000 SS316, EM-P 1500 SS316, EM-P 2000 SS316

bearing the mark:

CE Ex II 2G Ex h IIC T6...T3 Gb

Or

CE Ex II 3G Ex h IIB T6 Gc

have been manufactured by GemmeCotti s.r.l in accordance with the following EC directives:  
**2014/34/EU, 2006/42/EC\***

and the following standards:  
**EN 12100, EN 809, EN 1127-1, EN 80079-36, EN 80079-37, EN 15198**

The manufacturing process of the pump is controlled by a Quality Management System according to ISO 9001:2015 standards and the internal control of production (CE n. 121 by S.O. is approved at GEM, notified body n. 0133).

The declaration of conformity is issued under the sole responsibility of the manufacturer.

**!** These closed magnetic drive pumps, considered as equipment, comply to design with the directive providing that installation is correctly performed by the manufacturer of the machinery assembly. The pump must not be put in duty until the machinery or plant into which it has been incorporated is accepted in conformity with the Machinery Directive. This declaration does not imply any warranty of properties. The safety instructions of the accompanying product documentation shall be observed.

Since there exists an infinite variety of products and chemical compositions that can be suitable to be processed by the device considered, the end user is the only one responsible to carry the reactions and suitability with respect to use of built the pump. Therefore, all necessary tests and checks must be performed with great care to avoid any loss, and any accident event that cannot be foreseen by the manufacturer and of which GemmeCotti is not responsible. Every device has to be in compliance of European Directives.

**Enrico Gemme**  
General Manager

**GemmeCotti**  
EUROPEAN PUMPS

Via A. Volta 85/9 - 20816 - Ceriano Laghetto (MB)  
ITALY - EU

www.gemmecotti.com

Tel. +39 02 96453406 - info@gemmecotti.com

Ceriano Laghetto, Date: \_\_\_\_\_

<sup>10</sup> ATTENTION: the pump described in the document, considered as a component, is in compliance with the stated Directives if it's correctly installed by the customer in the machine/plant of the final user. The pump can't be started until the machine/plant (which contains it) is also in accordance with the stated Directives. This declaration does not imply any property warranty. THE SAFETY INSTRUCTIONS SUPPLIED WITH THE PUMP MUST BE FOLLOWED